



Rough / Vibration Service

100A/2P/RS 12/2

Philips Family of Specialty Incandescents provide the perfect light for dramatic accents and display lighting as well as general lighting in a variety of applications. Rough Service incandescent lamps have an exceptionally strong filament for which a special filament wire is used, which makes these lamps extremely suitable for places where shocks, bumps and vibrations frequently occur. The clear version, with its completely visible filament, is a brilliant light source, whereas the inside-frosted lamp is used wherever well diffused light is required.

Product data

General Information	
Cap-Base	E26 [Single Contact Medium Screw]
Operating Position	Universal [Universal]
Main Application	General Lighting (G)
Gas Filling	Gas
Rated Lifetime (Hours)	2000 h

Operating and Electrical	
Power (Rated) (Nom)	100 W
Voltage (Nom)	130 V


Mechanical and Housing	
Bulb Finish	Frosted
Cap-Base Information	Aluminum [Aluminum Base]

Filament Shape	C-9 [Pendant]
Bulb Shape	A19 [A19 (A19)]

Product Data	
Order product name	100A/2P/RS 12/2
EAN/UPC - Product	50046677286908
Order code	111724
Numerator - Quantity Per Pack	1
Numerator - Packs per outer box	12
Material Nr. (12NC)	925283534304
Net Weight (Piece)	0.032 kg

Rough / Vibration Service

Dimensional drawing

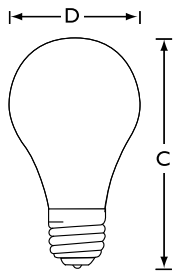

A19

Std 100W E26 130V A19 FR

Product	D	C (max)
100A/2P/RS 12/2	2.375 in	4.438 in

